


# TECH TIPS

## FUEL PRESSURE SENSOR



REF. 1473501 | ASSEMBLY RECOMMENDATION

Only the black o-ring seal must be assembled, otherwise gasoil leaks could happen. The metallic seal is for another pressure sensor assembling (OEM ref. 1920GW).

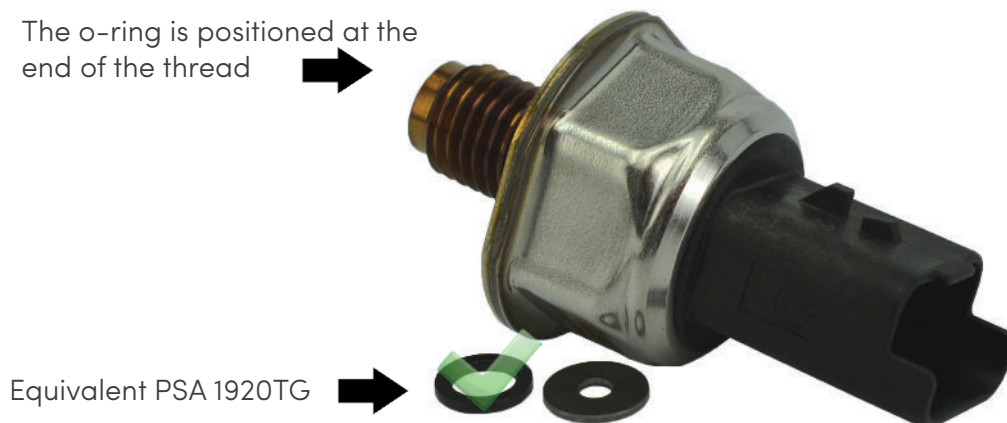

Before fitting, check that there is a washer in the injection rail: if a washer is already in place, replace it with the one supplied in the box with the sensor. On the other hand, if no washer is present, do not add the one supplied.



Recommended tightening torque: **45 Nm**  
(risk of sensor breakage and deterioration of the common rail).



**Technical hotline**

+33 (0)4 72 88 12 63

[hotline.aftermarket@efiautomotive.com](mailto:hotline.aftermarket@efiautomotive.com)